Read Security Code

For programming new keys and immoboliser, functions the Security Code is required. This code can normally be found on the Pass. Unfortunately, the Car Pass is often lost.

With OP-COM you can read the security code from the following models:

- Corsa-C
- Meriva
- Tigra-B

Model selection

Corsa-C / Meriva / Tigra-B

- Choose Body
- Choose Instrument
- Choose EPROM info
- Now the Security Code can be read from EPROM